 
 


powerbass

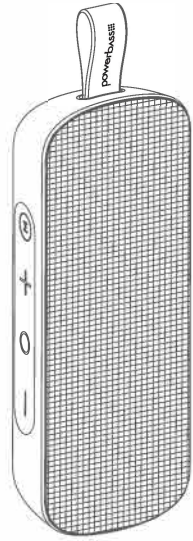

**BT-150 SoundCube
User's Manual**

 
**Step 1 - Power On
Bluetooth Connection**

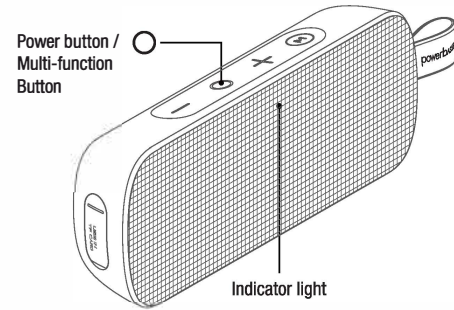

Long-press the button for 2 seconds, you will hear a prompt tone of "power on." The blue LED indicator light will flash quickly and enter into the bluetooth pairing status

1


**Step 2 - Pairing
Bluetooth Device**

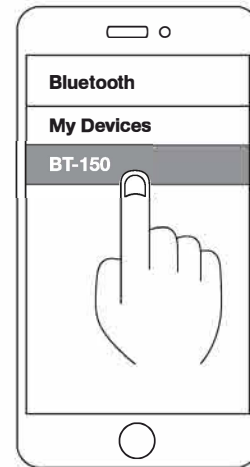

Find "BT-150" in your bluetooth list and select it.

2

 **Step 3 - Pairing Success
Bluetooth Indicator**

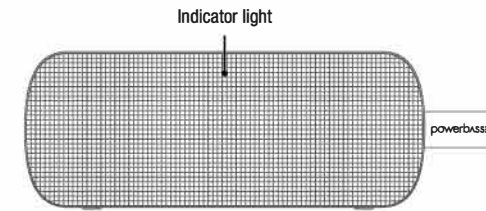

The LED indicator remains blue once pairing is done, music may be played afterwards.

 
NFC Connection



Connect to NFC enabled devices with just a 'tap' onto the antenna.

3

TWS Function

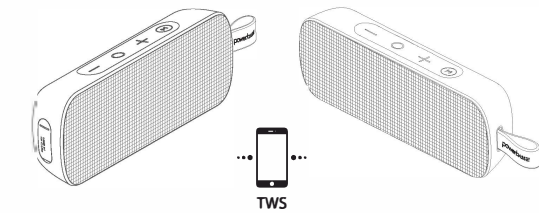

1. Power both BT-150 SoundCubes on.
2. On one of the BT-150 SoundCubes SHORT PRESS the buttons at the same time. They will enter into TWS Pairing mode accompanied by a sound notification.
3. After 1-2 seconds the two SoundCubes will pair automatically followed by another audible notification when they are connected successfully.
4. Open the Bluetooth Devices Settings on your Bluetooth source menu and select 'BT-150'

Disconnect: SHORT PRESS to disconnect TWS.

NOTE: For TWS pairing, please let the two speakers finish connecting to each other prior to enabling the Bluetooth source.

NOTE: TWS only works in Bluetooth Mode

4

FCC Compliance Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this product not authorized by PowerBass USA could void the user's authority to operate the product.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

powerbass

Model: BT-150
FCC ID: 2ARV3-BT150
RoHS CE
Made in China

Basic Operation

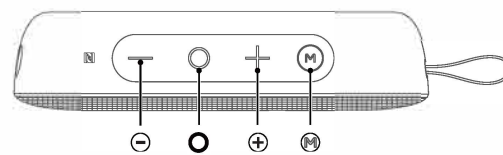

POWER BUTTON / MULTI-FUNCTION BUTTON

Power on/off: Long Press for 2 seconds

Answer/end call: Short Press

Reject call: Press twice

Resume/pause music: Short Press

Disconnect Bluetooth: Press 2x to disconnect bluetooth.

VOLUME BUTTONS

Volume increase: Short press

Volume decrease: Short press

Next track: Long press in Bluetooth or TF Card Mode

Previous track: Long press in Bluetooth or TF Card Mode

Next FM Station: Long press in FM Mode

Previous FM Station: Long press in FM Card Mode

MODE BUTTON

Switch between Bluetooth/SD/FM: Short press

Search FM Radio Stations: Long press

OPERATING THE FM FUNCTION

 
Switch to FM Mode: Short press . A prompt tone will follow.

Search FM Stations: Long press to start searching for a station.

Switch FM Stations: Long press or to switch.

5

Interface Instructions

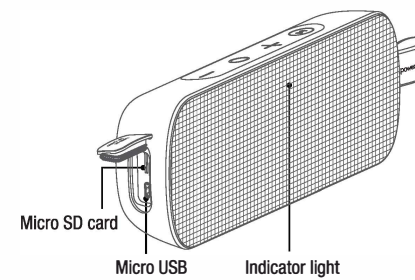

POWER ON	When powered on the blue indicator will flash quickly.
BLUETOOTH MODE	Blue indicator light turns on when Bluetooth connects successfully. Blue indicator light will flash quickly when Bluetooth signal is out of range. After 10 minutes the unit will turn off automatically.
TF / Micro SD CARD MODE	Insert Micro SD card, blue indicator light will flash slowly during playback; blue indicator will remain solid when pause music.
FM MODE	Blue indicator light will flash quickly during channel searching. Blue indicator light will flash slowly during radio playback. Blue indicator light will remain solid when paused.
CHARGING MODE	Red indicator light will remain solid while charging. red indicator light will be off when charging is done.
LOW BATTERY	When the battery is lower than 10%, the red indicator light will flash quickly accompanied with a voice prompt (around 3.5V) and will alert again once every 3 mins.

6

BT-150 Specifications

Product Name: **BT-150 SoundCube XL**
 Bluetooth Version: **5.0**
 Battery Capacity: **2000mAh**
 Play Time: **4-6 hours (70% volume)**
 Charging Time: **2~3 hours**
 Driver Units: **5W x 2/4Ω**
 Charging Current: **5V / 1A**
 Product Dimensions: **200 x 78 x 47mm**
 Product Weight: **360g ± 10**

NOTES

1. Please read this manual carefully before use.
2. Upon using the speaker for the first time, please fully charge the unit.
3. Please use the included certified adapter which has passed national safety certifications.
4. Please charge the speaker at least once a month to maintain battery performance.
5. Using this speaker in extremely cold or hot environment (beyond the range of 104°F to -20°F) may trigger the auto turn off to protect the internal circuit.
6. Charging this speaker in a high temperature environment may trigger the auto turn off for charging to protect the battery. The Power Indicator will flash quickly to indicate that the charging environment temperature or the product internal temperature is too high.
7. Recommended ambient storage temperature: -20°F-95°F RH <70% (recommended 77°C ±5°).

7

FAQ

- Q: What kind of charger should we use for the speaker?**
 A: While all common micro USB chargers can be used, we suggest 5V/2A or above 2A.
- Q: What if there is noise or discontinuous sound during playback?**
 A: Normal range of the bluetooth speaker is 30ft with a clear unobstructed path. Please check if the speaker is within range with a clear path.
- Q: Why did the speaker power off automatically without the Bluetooth disconnecting?**
 A: If the speaker is not paired for longer than 10min, it will automatically turn off.
- Q: Why does the speaker not connect to the once-paired phone or device?**
 A: Remove BT-150 from your Bluetooth Device List then restart pairing (pg 1-3).
- Q: What is the start up mode of the speaker?**
 A: Default mode is Bluetooth mode but if a Micro USB is inserted, it will be in Micro USB mode.
- Q: Why will the speaker not power up?**
 A: Plug in the charger and retry in a few minutes or try to long press the power button for 10-30 seconds to force reset.

- IMPORTANT SAFETY INSTRUCTIONS:**
1. Do not personally disassemble or repair this speaker, otherwise it may cause product damage or personal injury
 2. Do not use the speaker in dusty, humid, dry, or high-temperature environment.
 3. Do not place this speaker near a heat source, in direct sunlight, in a dusty area or on vibrating surface.
 4. In order to reduce the risk of fire, please do not cover this speaker while in use (newspapers, tablecloths, curtains etc.,).
 5. This speaker is rated IPX7, please do not exceed the nominal parameters (submerged up to 1 meter of water for 30 minutes).
 6. When any part of the product is damaged, such as the power cord, plug, liquid entering into or an object falling onto the device, and is unable to operate normally or fails, it must be repaired.
 7. When the product is fully charged, do not keep the charger connected for a long period of time.
 8. The maximum ambient temperature should not exceed 140°F.

*This speaker supports mobile phones and tablet PCs etc.

8