



S-84D

S-84

S-1004

S-1004D

S-1204

S-1204D

Autosound "S" Series Subwoofer

Application & Enclosure Guide

Please read through this manual to familiarize yourself with your new speakers. Should your PowerBass Autosound subwoofer ever require service, you will need to have the original dated receipt.



Thank you and Congratulations

Congratulations on your decision to purchase PowerBass "S" series woofers. You now own a woofer of uncompromising design and engineering philosophy from a factory that truly believes in the relentless pursuit of perfection. Incorporating the highest quality parts and state-of-the-art materials, these woofers display the ultimate balance between high fidelity, extreme performance and long-lasting reliability.



At PowerBass USA, Inc. we are confident you will have many years of outstanding enjoyment from your superior subwoofer investment. For maximum performance we recommend that you have your new PowerBass "S" series Woofer installed by an Authorized PowerBass Dealer.

To learn more about PowerBass, please visit us on the World Wide Web at http://www.powerbassusa.com

Δ Warning Δ

Continuous exposure to sound pressure levels in excess of 100 dB can cause permanent hearing loss. PowerBass Autosound Speakers are capable of producing sound pressure levels well over 170 dB. Please observe all local sound ordinances while listening to your PowerBass Autosound system. PowerBass USA, Inc. accepts no liability for hearing loss, bodily injury, or property damage due to the result of use or misuse of this product.

POWERBASS AUTOSOUND "S" WOOFER FEATURES

Improved 4-layer Black Paper/Wool Cone: The premium grade cones on these subwoofers are delicately balanced mix between Wool and Paper pulp. This results in a extremely warm and accurate sound while remaining exceptionally stable even under the stress of high sound pressure levels.

Large Roll Foam Surround: This treated large roll surround is used to ensure long and linear travel throughout the entire excursion range resulting in more bass output and higher SPL.

Rigid Tooled Stamped Basket with Voice Coil Perimeter Aero-Vents: This thick stamped steel basket is manufactured to the highest standards to ensure maximum excursion, exceptional alignment of the subwoofers motor structure and moving parts. A new basket coating offers improved damping and reduced resonance.

Vented Motor Structure: Just like a car's engine, the motor structure of a woofer drives the cone. This bumped and vented magnet assembly will allow your S-series woofer to handle lots of power while delivering accurate linear movement for tight deep bass.

Chrome Push Input Terminals: These high strength compression loaded speaker terminals ensure maximum current and power transfer.

Injection Molded Dust Cap: This newly redesigned larger dust cap reduces resonance and possible distortion along with non-linear movement.

2" BASV High Temperature Voice Coil: These specially designed resin coated high temperature voice coils ensure high power handling and precise linear excursion while maximizing thermal heat dissipation.

Rubber Mounting Gasket: The protective rubber-mounting gasket ensures an airtight seal which eliminates bass robbing air leaks.

Single and Dual 4-ohm Voice Coil: Made with pure PIW wire for multiple woofer applications and high energy and heat transfer. This makes the voice coil highly efficient, and allows you to play louder for longer.


Optimally Designed for Both Sealed and Ported Enclosures: for many sonic and installation applications. This gives you a wide range of uses for the S-Series Woofers.

WIRING GUIDELINES


It is highly recommended that you seek an authorized PowerBass dealer to properly setup, wire and install your woofers for maximum performance.

There are multiple ways to wire your woofers depending on your amplifier and system configuration. The use of multiple voice coils offers you more versatility in system configuration. It is important to know the limits of your amplifier to optimize its performance. It is always better to use your subwoofer in a mono / bridged mode if your amplifier has the capabilities. There are basically four different types of wiring configurations: Series, Parallel, Series-Parallel or Parallel-Parallel. It is possible to change the impedance or load by how the speakers are to be wired and by the quantity of woofers used.


DUAL VOICE COIL WIRING



Parallel wiring a dual 4 ohm sub = 2 ohm

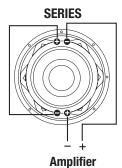

Series wiring a dual 4 ohm sub = 8 ohm

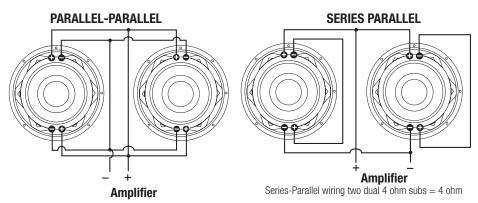


Parallel-Parallel wiring two dual 4 ohm subs = 1 ohm


NOTE: Never connect only one coil of a Dual Voice Coil (DVC) speaker. BOTH voice coils must be connected to the amplifier

SINGLE VOICE COIL WIRING

Single 4 ohm woofer

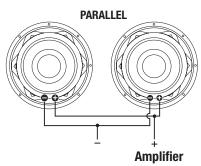


Parallel wiring of two single 4 ohm subs = 2 ohms

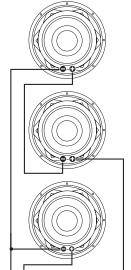

SERIES-PARALLEL

Series/ Parallel wiring of four single 4 ohm subs = 4 ohms

Amplifier

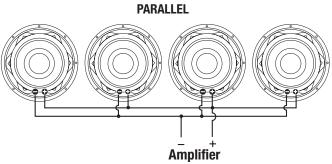

Parallel wiring of four single 4 ohm subs = 1 ohms

INSTALLATION EXPERIENCE

Installation of PowerBass Autosound Subwoofers requires experience with a variety of mechanical procedures including enclosure construction. This manual only provides general installation and operation instructions. If you have any reservations about your installation skills, please contact your local Authorized PowerBass dealer for assistance.

CHOOSING A SPEAKER ENCLOSURE

MULTI ENCLOSURE COMPATIBILITY the PowerBass Autosound Subwoofers are engineered to perform well in various types of enclosures. These subwoofers offer the versatility of being used in either sealed, vented or band-pass enclosures. For maximum performance we recommend you have your new Power-Bass Autosound Subwoofer installed by an Authorized PowerBass Autosound Dealer.

SEALED BOX: A sealed or acoustic suspension enclosure is easy to build and typically offers a smaller size enclosure and greater power handling. It has the most predictable frequency and phase response; the bass response will roll off slower than that of a ported design. Sealed boxes typically provide the best musical detail and definition. A well-designed sealed enclosure will exhibit smooth frequency response with excellent sound quality and great low bass extension. They also exhibit relatively accurate, punchy bass reproduction for most types of music. If a sealed enclosure is too large to fit into a specific area of a vehicle, it is possible to decrease the recommended box volume by using 1.5 pounds per cubic feet of low density, high heat specific box stuffing material. PowerBass recommends Fiberglass, Dacron, Poly-Fill or long fiber wool for stuffing the enclosure. (Decreasing the box enclosure however should not exceed 20% of the recommended size.) When using any type of box stuffing material be sure that the subwoofer's vented pole piece is clear from any obstructions, since covering the pole piece will result in loss of bass and can possibly cause damage to your subwoofer. The most important aspect of a sealed enclosure is to make sure that it is airtight and solid. If your enclosure has any air leaks or if the panels vibrate or flex, you will experience a loss of bass output. Using glue and some type of sealant (caulk) on all seams will ensure a solid constructed box without any air leaks.

- VENTED BOX: Also known as a ported or bass reflex enclosure, this type of box is almost as easy to construct as a sealed enclosure. This design however is more efficient and results in an increase of bass output at certain frequencies. Although vented enclosure has an output advantage at some frequencies, it also has a steeper roll off, which will only affect bass frequencies below port tuning. Air inside the port will move in phase with the subwoofer reinforcing frequencies above the F3 (-3dB point). The SPL advantage of the vented enclosure comes from the fact that the effect of the vent tuning reduces the excursion of the subwoofer near the tuning frequency allowing more SPL to be produced before the subwoofer bottoms. Damping material should also be used to line the internal walls to reduce any sonic reflection. Because of the characteristics of a vented enclosure, subwoofers typically will become unloaded (act as if it is not in a box) at frequencies of ½ octave below the enclosure tuning frequency. Using a high pass filter / subsonic filter will help prevent the subwoofer from unloading or exceeding its excursion capabilities. It is important to stay within the recommended enclosure designs. (*PowerBass recommends port placement to coincide on the same panel or baffle that the subwoofer resides on.*)
- BANDPASS ENCLOSURE: The most common band-pass enclosure is a combination of a sealed and a vented enclosure working together (4th order or single reflex band-pass system). The rear of the speaker goes into the sealed chamber while the front of the speaker goes into the vented chamber. Because the vent produces all the sound generated from this type of enclosure, sound quality may not be as good as a well-designed ported or sealed design. Often the sacrifice for sound quality and subwoofer cone control is greater SPL output. However unlike a sealed or vented enclosure, you can effectively increase the enclosure sensitivity with the appropriate tuning choices. You can choose to design a narrow frequency band with very high sensitivity or choose a wide frequency band with the sacrifice of lower sensitivity. The damping effect of the vented chamber reduces the motion of the cone so that potentially higher sound output is achieved without the subwoofer reaching its mechanical limits. Minor deviations from design recommendations however may result in frequency response and distortion problems.

(If you are intending to use multiple subwoofers in your system, PowerBass recommends having separate chambers for each subwoofer if the subwoofers will be operated by two different amplified signals. This will prevent any possible cancellation.)

TIPS TO GET THE MOST OUT OF YOUR S SERIES WOOFER

Your PowerBass Autosound subwoofer has been meticulously engineered and designed to handle high power musical reproduction. Despite their rugged construction, it is possible to damage your speaker if they are improperly used. In general, you will hear distortion as a warning before any damage occurs. If you hear distortion in your system, immediately reduce the musical level to the point where the sound retains its clarity.

- All PowerBass Autosound subwoofers require an initial break-in period before it will reach optimum
 performance. Like any new precision machinery, allow a minimum of several days to one week with
 normal daily usage to ensure that the suspension has properly been broken-in.
- 2. With any dual voice coil subwoofers avoid using only one voice coil. Doing so will significantly decrease the efficiency and power handling of the speaker.
- 3. Be sure you supply the speakers with enough unclipped amplifier power to drive them properly. (More damage can be done to a speaker by under-powering and clipping your amplifier than any other way!)
- 4. Where possible, run your Speakers in mono instead of stereo. Most bass is reproduced in mono so there is less chance of any cancellation if played in mono.
- 5. Where possible, wire your Speakers in parallel instead of series. Bass is reproduced either way but again there is less chance of cancellation in parallel. NOTE: Be sure the amplifier you are using is stable at the resulting impedance of the speaker load!
- 6. Where possible, a separate amplifier just for your subwoofers should be used with an electronic crossover to set the frequency range. One amplifier with passive crossovers will work (Tri-Way Setup), but the system will do more with less stress on the amplifier by using two amps.
- 7. Do not block the front of your speakers or ports. You want as much direct air coupling as possible. Also be sure to round off the inside edges of the port to reduce any port noise.
- 8. For ported enclosures, keep in mind that you must leave at least twice the port diameter size between the subwoofer and the port itself. Leave at least the same distance between the port and any walls of the enclosure as the diameter of the port. (e.g. if you use a 4" port there should be at least 4" between the back of the port and the back of the box.)
- 9. Remember the Golden Rule "Measure twice...cut once."

BOX CONSTRUCTION (SEALED OR VENTED): The material used for enclosure walls should be solid, dense and free of voids or warps. Your enclosure should be made ¾" or 19mm material, Finland or Baltic birch type plywood is recommended where the enclosure will be transported frequently. Highdensity fiberboard - MDF (not chip board) can be used on permanently installed systems. Minimum of 1" (25mm) or double 3/4" (1-1/2") baffle is recommended on high-powered SPL applications. Corners must be strong and air tight and should not have any air leaks or openings. Joints should be properly filled with glue that will not crack under high stress or impact. If the integrity of the glue seal can't be determined, hot glue or RTV caulking should be used to seal all seams. Fiber reinforced resin may also be used to form custom shapes. However avoid making large panels with resin to eliminate any chances of box flexing, cracking or ratting under high pressure. Bracing made of 2 x 2" or 2 x 4" should be liberally applied either inside or outside the cabinet, depending on whether the cabinet is to be permanently installed or portable. This principle applies to any walls of the enclosure spanning more than 18" long. Any braces should also be liberally glued or screwed down on edge. Edge-wise drilled, and countersunk holes through the braces can be used for #10-2 Flathead wood screws to avoid the use of more expensive lag bolts. The majority of strength from an enclosure comes from the glue. When using screws be sure to pre-drill holes to avoid splitting the wood.

WARNING! The use of silicone rubber to seal in a speaker will void the Warranty! If any sealing is needed in addition to the speaker's gasket, use caulking cord or vinyl weather strip.

SUBWOOFER CROSSOVER SETTING

Your PowerBass subwoofers will perform best if they are used in conjuction with a subwoofer crossover of some kind. Using a crossover will remove unwanted high frequencies and allow them to concentrate only on bass. The two most common types of crossovers are "passive" or "active" (electronic crossovers are active). Many amplifiers have a built in Low Pass (LPF) electronic crossover circuit. For optimum subwoofer performance we recommend an initial electronic crossover setting between 80-100Hz and then tuning the bass to your liking.

PREPARING FOR INSTALLATION

NOTE: The tools listed below may be required for basic installation.

- An electric drill with bits
- Saber, circular and jig saw
- Phillips-head and standard screwdrivers
- Wire strippers
- Crimping tool and needle-nose pliers
- Silicone sealant (for enclosures), closed cell weather-stripping (for the speakers)

INSTALLATION PRECAUTIONS

NOTE: Proceed only if you are a qualified installer otherwise; let your dealer do it.

- Always wear protective eyewear when using tools.
- Turn off all electrical devices before you begin.
- Disconnect the (-) negative lead from your vehicle's battery.
- Keep the speakers in the package until final installation, and always rest it with the cone facing up.
 Never use force when installing a speaker.
- Locate all fuel lines, brake lines, oil lines, and electrical cables when planning your installation.
- Check to see if there is enough clearance behind the mounting surface before drilling holes or installing screws for proper speaker ventilation.
- Also make sure there's enough front clearance for speaker cone excursion. Failure to do this could
 cause the cone to vibrate against any obstructing object.
- Use a utility knife to trim away fabric from the speaker mounting hole location before drilling. It is hard to get a good seal if you have both the carpet & subwoofer gasket between the speaker and the enclosure.
- When running speaker wires through sheet metal, be sure to use grommets to properly insulate the wires from metal edges.

PARAMETERS FOR POWERBASS S SERIES WOOFERS

(Due to Constant Improvements, Specifications and Parameters are subject to change without notice.)

	S-84	S-84D	S-1004	S-1004D	S-1204	S-1204D
VC Impedance (ohms)	4Ω	$4\Omega + 4\Omega$	4Ω	$4\Omega + 4\Omega$	4Ω	$4\Omega + 4\Omega$
Test Impedance (ohms)	3.2	1.65	3.2	1.6	3.2	1.6
Driver Displacement	0.0447 cuft	0.0447 cuft	0.0762 cuft	0.0762 cuft	0.126 cuft	0.126 cuft
Fs (Hz)	41	42	33.5	33	32	31
SD (sqCM)	206.12	206.12	330.06	330.06	510.7	510.7
Vas (Ltr)	19	18.4	43.8	39.7	61.8	64.9
Cms (µM/N)	317	279	270	256	166.8	175.3
Mms (g)	49.6	51.5	94.2	98.5	142.8	150.5
BL™	9	6.4	11.6	7.44	13.2	9.10
Qms	4.85	4.3	5.12	4.85	5.58	4.5
Qes	0.467	0.521	0.43	0.566	0.537	0.56
Qts	0.43	0.46	0.4	0.51	0.49	0.50
No (%)	0.24	0.23	0.287	0.2	0.22	0.3
Spl (dB)	86	86	86.6	86	88	87.5
Xmax (mm)	7	7	9	9.5	9	9.5
Voice Coil Size (inches)	1.5	1.5	2.0	2.0	2.0	2.0
Frequency Response (Hz)	41-800	42-800	33-500	33-500	31-500	31-500
Mounting Depth	3.5"	3.5"	5.2"	5.2"	5.5	5.5"
Power (RMS/ Peak)	125/250 watts	125/250 watts	275/550 watts	275/550 watts	300/600 watts	300/600 watts

RECOMMENDED ENCLOSURES

Please note that these enclosure volume recommendations are for the internal airspace inside the enclosure and include the displacement of the subwoofer and ports. When choosing your enclosure type, please pay close attention to your specific woofer, failing to use the correct enclosure may result in lower power handling and poor sound quality. *To calculate the internal airspace available, take the internal dimensions of the box. First multiple these number by themselves and then divide this sum by 1728.* (W x H x D) / 1728. Please contact your authorized PowerBass Autsound dealer for other designs and specifications. (Even though these subwoofers can be used in a ported enclosure, PowerBass recommends a sealed enclosure for optimum performance and sound quality.)

S-84

Optimum Sealed Volume	English Unit	Metric Unit
Gross Vb internal	0.5 Cu.ft	14.2L
Fc, (resonance frequency of the closed box system)	58Hz	58Hz
F3 (-3dB Cutoff)	60Hz	60Hz
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	11.5x11.5x10.25 inch	29.2x29.2x26 cm
Qtc	0.68	0.68
Pe (Watts-RMS)	50-125W	50-125W
Acceptable Volumes	0.5-0.75 Cu.ft	14.2-21.24L

Optimum Ported Volume	English Unit	Metric Unit
Gross Vb internal	0.75 Cu.ft	21.24L
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	13.5x13.5x10.5 inch	34.3x34.3x26.67 cm
Internal port opening size, W x H	7.5x1.5 inch	19.1x3.8
Internal port Length	17 inch	43.18 cm
Fb (Box Tuning)	41Hz	41Hz
F3 (-3dB)	48Hz	48Hz
Pe (Watts-RMS)	50-125W	50-125W
Subsonic Filter Setting If Applicable	48Hz	48Hz

S-84D

Optimum Sealed Volume	English Unit	Metric Unit
Gross Vb internal	0.5 Cu.ft	14.2L
Fc, (resonance frequency of the closed box system)	56Hz	56Hz
F3 (-3dB Cutoff)	53Hz	53Hz
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	11.5x11.5x10.25 inch	29.2x29.2x26 cm
Qtc	0.683	0.683
Pe (Watts-RMS)	50-125W	50-125W
Acceptable Volumes	0.5-0.75 Cu.ft	14.2-21.24L

Optimum Ported Volume	English Unit	Metric Unit
Gross Vb internal	0.75 Cu.ft	21.24L
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	13.5x13.5x10.5 inch	34.3x34.3x26.67 cm
Internal port opening size, W x H	7.5x1.5 inch	19.1x3.8
Internal port Length	17 inch	43.18 cm
Fb (Box Tuning)	41Hz	41Hz
F3 (-3dB)	48Hz	48Hz
Pe (Watts-RMS)	50-125W	50-125W
Subsonic Filter Setting If Applicable	48Hz	48Hz

Tech Support 8:30am-5:30pm Pacific Time (909) 923-3868 www.powerbassusa.com

S-1004

Optimum Sealed Vol.	English Unit	Metric Unit
Gross Vb internal	0.75 Cu.ft	21.24L
Fc, (resonance frequency of the closed box system)	55Hz	55Hz
F3 (-3dB Cutoff)	57Hz	57Hz
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	13.5x13.5x10.5 inch	34.3x34.3x26.7 CM
Qtc	0.69	0.69
Pe (Watts-RMS)	100-275W	100-275W
Acceptable Volumes	0.6-1.25 Cu.ft	17-35.4L

Optimum Ported Vol.	English Unit	Metric Unit
Gross Vb internal	1.5 Cu.ft	42.49L
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	13x16x17.5 inch	33x40.6x44.45 CM
Internal port opening size, W x H	10x2 inch	25.4x5.1CM
Internal port Length	20 inch	50.8 CM
Fb (Box Tuning)	38Hz	38Hz
F3 (-3dB)	41Hz	41Hz
Pe (Watts-RMS)	100-275W	100-275W
Subsonic Filter Setting If Applicable	41Hz	41Hz

S-1004D

Optimum Sealed Volume	English Unit	Metric Unit
Gross Vb internal	0.75 Cu.ft	21.24L
Fc, (resonance frequency of the closed box system)	52Hz	52Hz
F3 (-3dB Cutoff)	48Hz	48Hz
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	13.5x13.5x10.5 inch	34.3x34.3x26.7 cm
Qtc	0.81	0.81
Pe (Watts-RMS)	100-275W	100-275W
Acceptable Volumes	0.6-1.25 Cu.ft	17-35.4L

Optimum Ported Volume	English Unit	Metric Unit
Gross Vb internal	1.5 Cu.ft	42.49L
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	13x16x17.5 inch	33x40.6x44.45 cm
Internal port opening size, W x H	10x2 inch	25.4x5.1 cm
Internal port Length	20 inch	50.8 cm
Fb (Box Tuning)	38Hz	38Hz
F3 (-3dB)	40Hz	40Hz
Pe (Watts-RMS)	100-275W	100-275W
Subsonic Filter Setting If Applicable	40Hz	40Hz

Tech Support 8:30am-5:30pm Pacific Time (909) 923-3868 www.powerbassusa.com

S-1204

Optimum Sealed Volume	English Unit	Metric Unit
Gross Vb internal	1.25 Cu.ft	35.4L
Fc, (resonance frequency of the closed box system)	44Hz	44Hz
F3 (-3dB Cutoff)	46Hz	46Hz
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	15x15x13.5 inch	38.1x38.1x34.3 cm
Qtc	0.69	0.69
Pe (Watts-RMS)	100-300W	100-300W
Acceptable Volumes	1.0-1.75 Cu.ft	28.32-49.5L

Optimum Ported Volume	English Unit	Metric Unit
Gross Vb internal	2.5 Cu.ft	70.75L
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	15.5x17.5x21 inch	39.4x44.5x53.4 cm
Internal port opening size, W x H	12.5x2.25 inch	31.8x5.7 cm
Internal port Length	18.8 inch	47.8 cm
Fb (Box Tuning)	34Hz	34Hz
F3 (-3dB)	37Hz	37Hz
Pe (Watts-RMS)	100-300W	100-300W
Subsonic Filter Setting If Applicable	37Hz	37Hz

S-1204D

Optimum Sealed Volume	English Unit	Metric Unit
Gross Vb internal	1.25 Cu.ft	35.4L
Fc, (resonance frequency of the closed box system)	42Hz	42Hz
F3 (-3dB Cutoff)	44Hz	44Hz
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	15x15x13.5 inch	38.1x38.1x34.3 cm
Qtc	0.69	0.69
Pe (Watts-RMS)	100-300W	100-300W
Acceptable Volumes	1.0-1.75 Cu.ft	28.32-49.5L

Optimum Ported Volume	English Unit	Metric Unit
Gross Vb internal	2.5 Cu.ft	70.75L
External Dimensions of the enclosure WXHXD, 3/4" (19mm) MDF	15.5x17.5x21 inch	39.4x44.5x53.4 cm
Internal port opening size, W x H	12.5x2.25 inch	31.8x5.7cm
Internal port Length	18.8 inch	47.8 cm
Fb (Box Tuning)	34Hz	34Hz
F3 (-3dB)	37Hz	37Hz
Pe (Watts-RMS)	100-300W	100-300W
Subsonic Filter Setting If Applicable	37Hz	37Hz



Notes:

1) For smoother bass response in a ported enclosure try adding a small amount of poly-fill.

WE WANT YOU LISTENING FOR A LIFETIME

Dear Customer,

Selecting fine audio equipment such as the speakers you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. PowerBass and the Consumer Electronics Association (CEA) want you to get the most out of your equipment by playing at a safe level. One that lets the sound come through loud and clear without annoying, blaring or distortion- and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

PowerBass and the CEA want you to listening for a lifetime!



This manual is the exclusive property of PowerBass USA, Inc. Any reproduction of this manual, or use other than its intentions is strictly prohibited without the express consent of PowerBass USA, Inc. Copyright 2014 PowerBass USA, Inc.

NOTES

POWERBASS AUTOSOUND LIMITED WARRANTY POLICY

PowerBass USA, Inc. offers limited warranty on PowerBass products under normal use on the following terms:

PowerBass Autosound Speakers are to be free of defects in material and workmanship for a period of one (1) year.

This warranty applies only to PowerBass products sold to consumers by Authorized PowerBass Dealers in the United States of America. Products purchased by consumers from a PowerBass dealer in another country are covered only by that country's Distributor and not by PowerBass USA.

This warranty covers only the original purchaser of PowerBass product. In order to receive service, the purchaser must provide PowerBass with a valid purchase receipt from an authorized reseller stating the consumer name, dealer, product and date of purchase.

Products found to be defective during the warranty period will be repaired or replaced (with a product deemed to be equivalent) at PowerBass's discretion and will not be liable for incidental or consequential damages. PowerBass will not warranty this product under the following situations:

- . Speakers received with bent frames or water damage
- Abuse such as holes in the cone, surround or ripped spider
- . Voice coil damage due to amplifier clipping or distortion
- · Product that has not been installed according to this owners manual

Any implied warranties including warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for PowerBass any other liability in connection with the sale of this product.

Please call (909) 923-3868 for PowerBass Customer Service. You must obtain an RA# (Return Authorization Number) to return any product to PowerBass. The RA number must be prominently marked on the outside of the shipping carton or the delivery will be refused. Please pack your return carefully; we are not responsible for items damaged in shipping. Return the defective product along with a copy of the original dated retail sales receipt, plus \$12.00 for handling and diagnostic evaluation to:

PowerBass USA, Inc.,	
Attn: Returns (RA#)
2133 S. Green Privado,	Ontario, CA 91761

Residents of HI, AK and US territories will be charged for return shipping. All inquires regarding service and warranty should be sent to the above address.

Removed or altered serial numbers will void this warranty



PowerBass Autosound – A division of PowerBass USA, Inc. 2133 S. Green Privado – Ontario, CA 91761 Tel. (909) 923-3868 – Fax (909) 923-8048 www.powerbassusa.com